

1/2

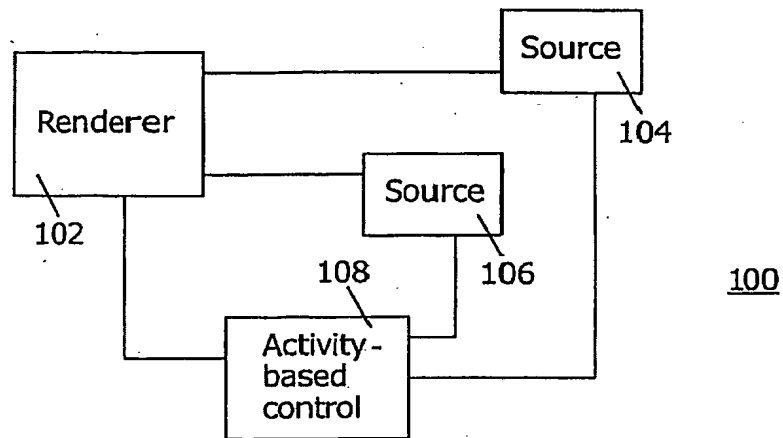


FIG.1

```
If TV_input_state = VCR then
    Send VCR-play command
Else:
    Send command to set TV input to VCR (eg IR code for
    "ext 1")
    Set TV_input_state to VCR
    Send VCR play command
```

FIG.2

2/2

```
If VCR_power_state is NOT ON
    Send VCR-On command
    Set VCR_power_state to ON

If TV_input_state = VCR then
    Send VCR-play command

Else:
    Send command to set TV input to VCR (eg IR code for
    "ext 1")
    Set TV_input_state to VCR
    Send VCR play command
```

FIG.3

```
If TV_power_state is NOT ON
    Send TV-On command
    Set TV_power_state to ON
    Set TV_input_state to default input state at power on
If VCR_power_state is NOT ON
    Send VCR-On command
    Set VCR_power_state to ON

If TV_input_state = VCR then
    Send VCR-play command

Else:
    Send command to set TV input to VCR (eg IR code for
    "ext 1")
    Set TV_input_state to VCR
    Send VCR play command
```

FIG.4